


LTI TAXI PARTS

B 02
FICHE 3 OF 3

FRONT WINGS (1 OF 2)

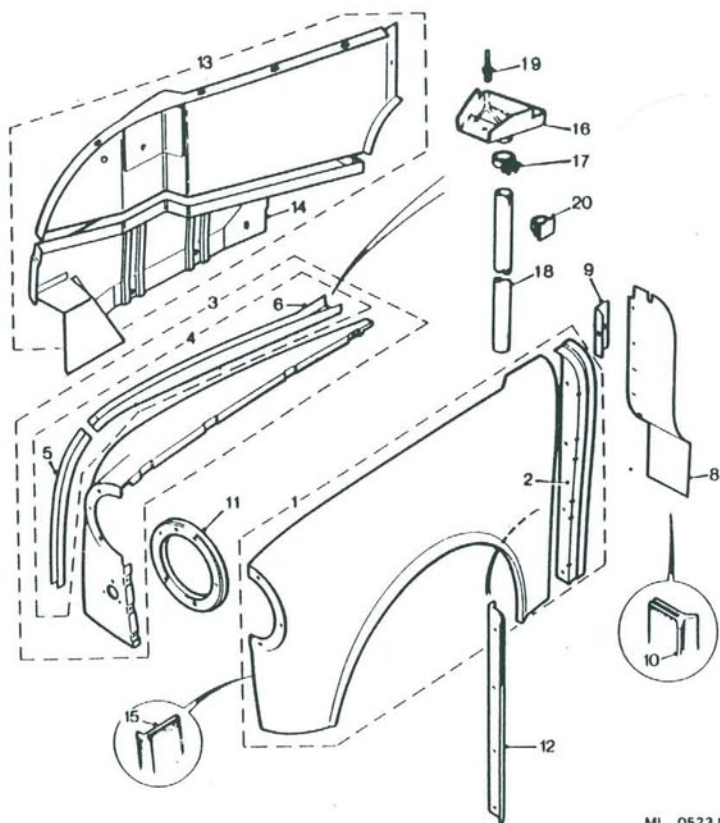

ML 0523 ■

| Illus. | Part No | Description | Qty | Remarks |
|--------|---------|---------------------------------------|-----|--------------------------------------|
| 1 | | Front LH wing outer-assembly | 1 | |
| | | Front RH wing outer-assembly | 1 | Fairway |
| | | Front RH wing outer-assembly RHD..... | 1 | Fairway Driver |
| | | Front LH wing outer-assembly LHD..... | 1 | Fairway Driver |
| | | Front RH wing outer-assembly LHD..... | 1 | Fairway Driver |
| 3 | | Front LH wing inner-assembly | 1 | |
| | | Front RH wing inner-assembly | 1 | |
| 11 | | Ring-headlamp reinforcing..... | 2 | |
| 12 | | Attachment-front wing inner LH..... | 1 | |
| | | Attachment-front wing inner RH..... | 1 | |
| 15 | | Piping-wing-lower..... | 2 | |
| | | Piping-wing-upper..... | 2 | |
| | | Piping-headlamp..... | 2 | |
| | | Wing piping (roll)..... | A/R | |
| 13 | | Valance LH-assembly RHD..... | 1 | Fairway |
| | | Valance RH-assembly RHD..... | 1 | Fairway |
| | | Valance LH-assembly RHD..... | 1 | Fairway Driver |
| | | Valance RH-assembly RHD-diesel..... | 1 | Fairway Driver |
| | | Valance RH-assembly RHD-petrol..... | 1 | Fairway Driver |
| | | Valance LH-assembly LHD..... | 1 | Fairway Driver |
| 8 | | Valance RH-assembly LHD..... | 1 | Fairway Driver |
| | | Splash shield RH..... | 1 | |
| | | Splash shield LH..... | 1 | |
| | | Rivet..... | 2] | |
| | | Setscrew..... | 6] | Splash shield to valance and toe box |
| | | Washer-spring..... | 6] | |
| | | Washer-plain..... | 6] | |
| | | Nut..... | 6] | |
| 9 | | Angle-splash shield RH..... | 1 | |
| | | Angle-splash shield LH..... | 1 | |
| | | Nut..... | 2] | Angle to valance |
| | | Washer-spring..... | 2] | |
| | | Finisher strip-front wing..... | 2 | Option |