



Illus.	Part No	Description	Qty	Remarks
1		Panel assembly-boot floor-rear.....	1	
2		Panel-boot floor-rear.....	1	
3		Panel-back lower.....	1	
4		Back panel.....	1	
12		Reinforcement-boot floor to lower back panel.....	4	
6		Panel-wheelarch <i>outer RH</i>	1	
7		Panel-wheelarch <i>outer LH</i>	1	
8		Panel-closing-wheelarch to wing RH.....	1	
		Panel-wheelarch inner LH.....	1	
		Panel-wheelarch <i>inner RH</i>	1	
9		Panel-closing-wheelarch to wing LH.....	1	
		Panel-filler-rear wing to floor RH.....	1	
		Panel-filler-rear wing to floor LH.....	1	
		Seat pan and rear floor assembly RHD.....	1	Fairway Driver
		Seat pan and rear floor assembly LHD.....	1	
		Rear floor panel assembly RHD.....	1	
		Rear floor panel assembly LHD.....	1	
10		Boot floor assembly-front.....	1	Fairway
13		Rear seat pan.....	1	
		Reinforcing plate-rear seat pan.....	1	
		Reinforcing plate-hinge seat.....	2	
		Rear floor panel assembly RHD.....	1	Fairway
		Boot floor assembly-front.....	1	
		Rear seat pan.....	1	
		Reinforcing plate-hinge seat.....	2	
14		Panel assembly-rear seat support.....	1	Fairway Driver
		Panel assembly-rear seat support.....	1	
		Bracket rear seat support to quarter panel LH.....	1	
		Bracket rear seat support to quarter panel RH.....	1	
15		Support-rear squab LH.....	1	
16		Support-rear squab RH.....	1	
30		Plate-spare wheel bolt mounting.....	1	
31		Bolt-spare wheel mounting.....	1	Fairway
		Stud-spare wheel mounting.....	1	Fairway Driver
27		Assembly-stiffener channel-rear floor centre.....	1	
		Gusset-rear floor member RH.....	1	
28		Gusset-rear floor member LH.....	1	